





## 5. Wiring Diagram

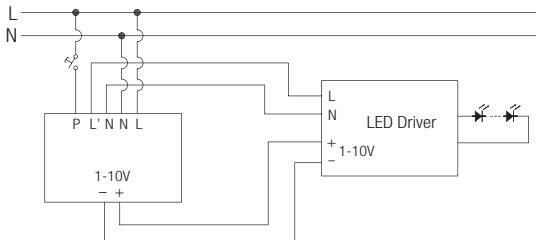


Note: if neither function 4.3 nor 4.4 is desired, simply leave the "push" terminal disconnected.

## 6. Detection Pattern

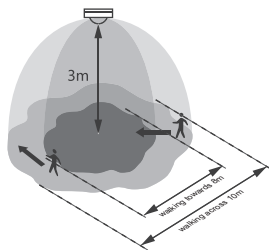

## 7. Description of the Button Functions (remote control HRC-11)

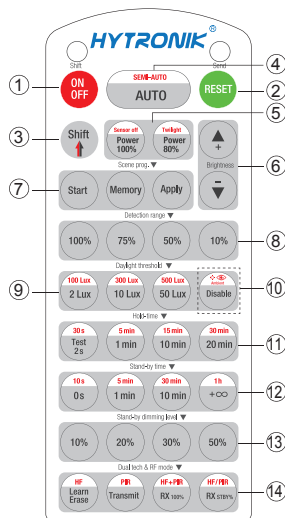

HRC-11

### Permanent ON/OFF [button ①]

Press button ① to select permanent ON or permanent OFF mode.  
\* Press button ②/④ to resume automatic operation.

### RESET [button ②]

Press button ②, all settings go back to the rotary switch settings.

### Shift [button ③]

Press button ③, the LED on the top left corner is on for indication.  
All values / settings in RED are in valid for 20 seconds.

### Auto Mode [button ④]

Press button ④ to initiate automatic mode. The sensor starts working and all settings remain as before the light was switched ON/OFF.

### Semi-auto Mode [button ③ & ④]

1. Press button ③ Shift (the red LED is on for indication),  
2. press button ④ to initiate semi-auto mode. The fixture is manually on by push-switch and automatically off in semi-auto mode.

### Power output [button ⑤]

Press button ⑤, the light output shifts between 80% and 100%.  
Note: the function of "Sensor off" and "Twilight" are disabled.

### Brightness +/- [button ⑥]

Press button ⑥ to adjust the light brightness between 10%~100%.

### Scene prog. [zone ⑦] (One-key-commissioning)

1. Press button "Start" to program.  
2. Select the buttons in ⑧ "Detection range", ⑨/⑩ "Daylight threshold", ⑪ "Hold time", ⑫ "Stand-by time", ⑬ "Stand-by dimming level" to set all parameters.  
3. Press button "Memory" to save all the settings programmed in the remote control.  
4. Press button "Apply" to set the settings to each sensor unit(s).  
For example, to pre-set detection range 100%, daylight threshold Disable, hold time 5min, stand-by time +∞, stand-by dimming level 30%, steps should be:  
Press button ⑦ Start, button ⑧ 100%, ⑨ Disable, ⑩ 5min, ⑪ Shift, ⑫ +∞, ⑬ 30%, ⑭ Memory. By pointing to the sensor unit(s) and pressing ⑦ Apply, all settings are passed on the sensor(s).

### Detection range [zone ⑧]

Press buttons in zone ⑧ to set detection range at 100% / 75% / 50% / 10%.

### Daylight threshold [zone ⑨]

Press buttons in zone ⑨ to set the daylight sensor at 2Lux / 10Lux / 50Lux / 100Lux / 300Lux / 500Lux or Disable.

Note: To set daylight sensor at 100Lux / 300 Lux / 500Lux, press button ③ Shift at first.

### Ambient daylight threshold [button ⑩]

1. Press button ③ Shift, the red LED is on for indication.  
2. Press button ⑩, the ambient lux level is sampled and set as the new daylight threshold.

### Hold time [zone ⑪]

Press buttons in zone ⑪ to set the hold time at 2s / 30s / 1min / 5min / 10min / 15min / 20min / 30min.  
Note: 1. To set hold-time at 30s / 5min / 15min / 30min, press button ③ Shift at first.  
2. 2s is for test purpose only, stand-by period and daylight sensor settings are disabled in this mode.

\*To exit from Test mode, press button ② or any button in zone ⑪.

### Stand-by time [zone ⑫]

Press buttons in zone ⑫ to set the stand-by period at 0s / 10s / 1min / 5min / 10min / 30min / 1h / +∞.  
Note: "0s" means on/off control; "+∞" means bi-level control, 100% on when motion detected, and remains at the stand-by dimming level when no presence after hold-time.

### Stand-by dimming level [zone ⑬]

Press buttons in zone ⑬ to set the stand-by dimming level at 10% / 20% / 30% / 50%.

### Dual tech & RF mode [zone ⑭]

All buttons in zone ⑭ are disabled.

## 8. Trouble Shooting

MALFUNCTION CAUSE REMEDY	CAUSE	REMEDY
The fixture does not light up	Incorrect daylight threshold setting	Adjust daylight threshold setting
	Faulty fixture	Replace fixture
	No power supply	Check power to sensor
	Detection zone not targeted	Check detection area setting
The fixture is always on	Continued movement in the detection zone	Check detection area setting
The fixture is on when it should not	Sudden change in temperature due to weather (wind, rain, snow) or air expelled from fans, open windows	Adjust zone, change installation site