



IP65 Housing for HF Motion Sensor

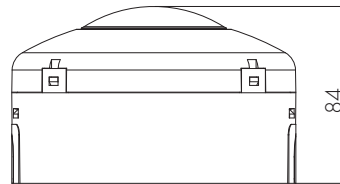

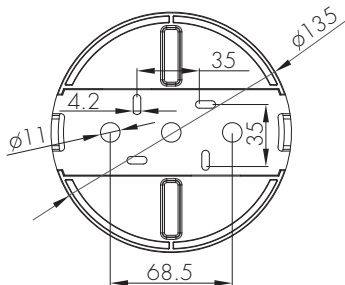








HC-IP65

HYTRONIK®

Mechanical structure



Putting the sensors inside the IP65 box, they are then safe and ready for independent installation. They are 2 colors of the box: transparent PC for daylight, and white PC when the daylight sensor is not intended to use.

	HC009S		
	HC005S		
	HC019V/I		
	HC018V		
	HC018V/RF		
	HC023RF		
	HC024RF		
	HCD405RC		
	HC019V/DH		

• • •

Installation Instructions

step1

Put motion sensor into the IP housing and click the cover on

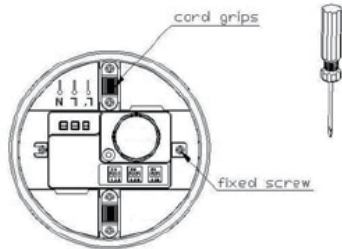


Fig 1.1

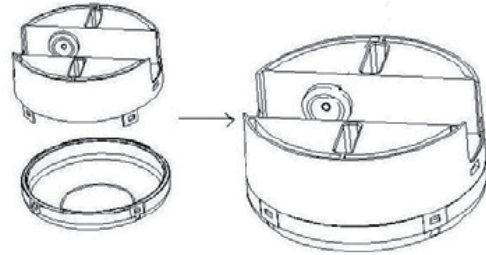


Fig 1.2

step2

Mounting bracket (three options):

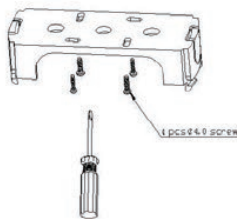


Fig 2.1

Option 1: Mount bracket to flat surface with screws

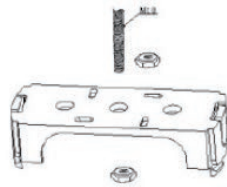


Fig 2.2

Option 2: Mount bracket to ceiling pole with nut

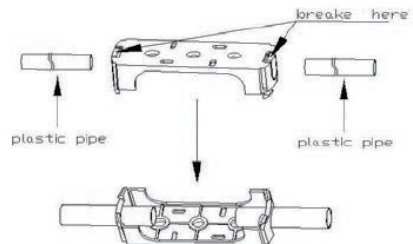


Fig 2.3

Option 3: Put pipe through the bracket hole

step3

Mount the bracket to the cover

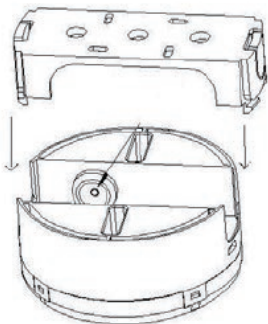


Fig 3.1

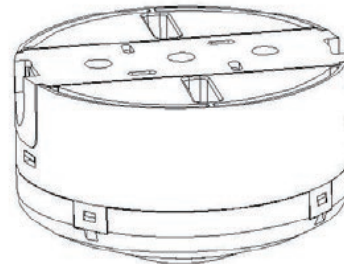


Fig 3.2

Additional Information / Documents

1. Regarding Hytronik standard guarantee policy, please refer to [www.hytronik.com/download ->knowledge ->Hytronik Standard Guarantee Policy](http://www.hytronik.com/download->knowledge->Hytronik%20Standard%20Guarantee%20Policy)